


DMX Live control and Stand Alone controller

- USB connection
- Up to 2 DMX512 universes
- 128k flash memory for storing stand alone programs
- 8 dry contact trigger ports via HE10 connector
- clock & calendar triggering function
- stand alone mode with 1 zone and 255 scenes



Universe #2*	Universe #1
1 DMX2 ground	1 DMX1 ground
2 DMX2 data-	2 DMX1 data-
3 DMX2 data+	3 DMX1 data+

*not compatible with SLESA-U8

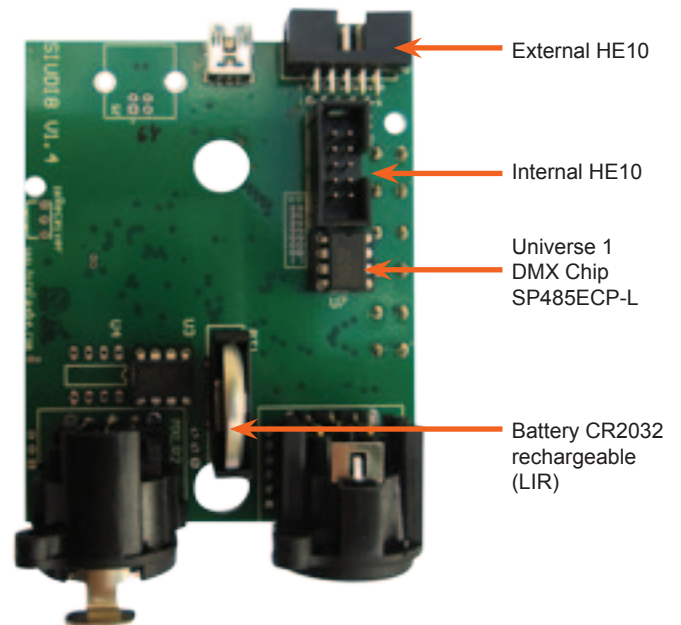

SPECIFICATIONS


Package	Interface, cdrom, usb cable
OS Requirement	Mac OSx 10.6/10.7/10.8 - Windows XP/VISTA/SEVEN/8 32/64 bits and USB 2.0
Colors	Blue, Orange, Gray, Green, Marine, White, Red
Connections	XLR3, mini USB, 2 HE10, battery
Power	Power From 5V to 5.5V DC (AC/DC adapter in option, ref: POWER1_EU)
Certifications	EC, EMC, ROHS, ETL, UL (some are in progress)
Interface	79x92x43 mm 120g
Package	140x135x50 mm 340g
Use	Environement IP20 Temperature 0°C to 50°C
Buttons	2 buttons to change scene (previous/next) + 1 button to change dimmer

External HE10




P1 PORT 1	P6 PORT 6
P2 PORT 2	P7 PORT 7
P3 PORT 3	P8 PORT 8
P4 PORT 4	GND Ground
P5 PORT 5	

 Internal HE10




1 Ground	6 NEXT
2 Dimmer	7 Zone
3 DMX1+	8 LED DMX
4 PREVIOUS	9 VUSB
5 DMX1-	10 LED USB

LIVE USE WITH COMPUTER

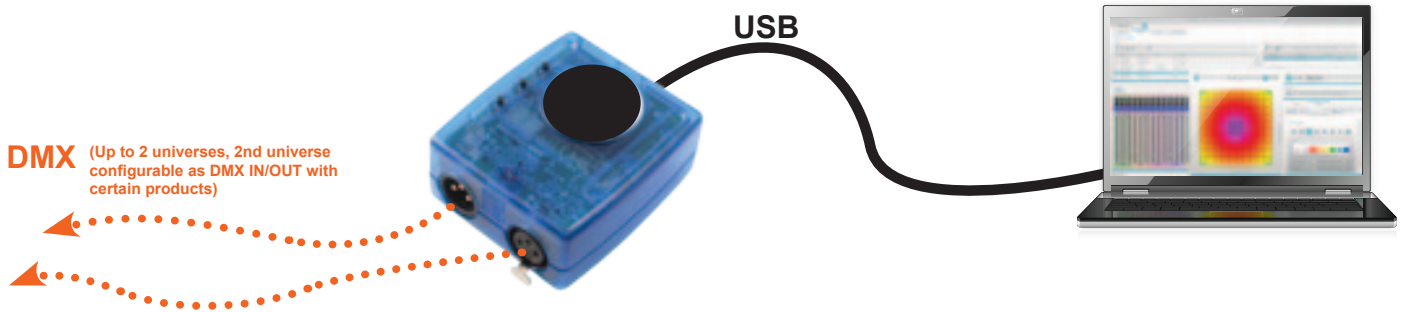

STAND ALONE USE

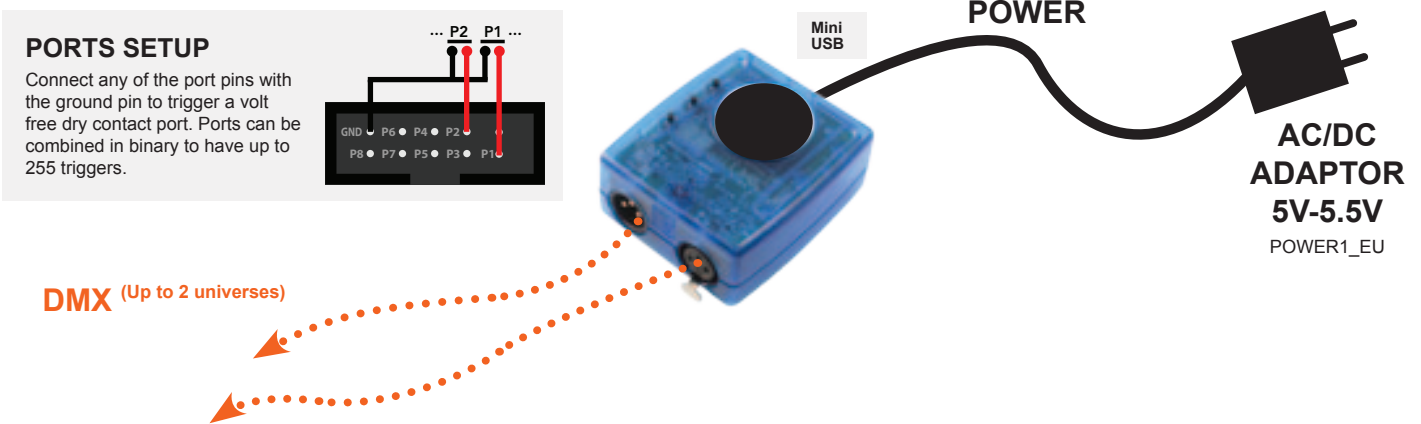

SOFTWARE TOOLS.EXE to set parameters



TOOLS TABS

Interface

Displays the serial number and firmware version

Stand Alone

Set the interface to stand alone mode

Firmware

Write the latest firmware

Test

Test DMX outputs and ports

Date / Time

Set date, time, and location coordinates

Parameters

Adjust special parameters

Dmx Timing

Adjust DMX output signal

- Easy Stand Alone software* (PC)
- ESA2 software* (PC & Mac)
- Sunlite Suite 2 (PC, works only with SUITE2-EC versions)

* SLESA-U8 limited to 1 universe