

How to repair mosaic tiles?

PROPERTIES



underwater



fast
ready in 20'



easy to use



resistant
chemical
products





clean

- Clean and sand the area to be repaired.
- Clean the gresite to be repaired.
- Prepare SUPER40
 - Open the syringe and level the components.
 - Put the cannula and set it.
- Apply SUPER40 in the area to be repaired.
 - It is recommended to apply the product covering the entire area.
- Place the gresite and apply pressure until the adhesive overflows.
- Wait 10 minutes.



TIPS

- Cement in poor condition will make the repair expensive. Remove all dirt and grime.
- Working time: 3-5 minutes.
- Cure time: 10 minutes.
- If multiple pieces are going to be repaired, schedule the repair it can be done without any breaks.

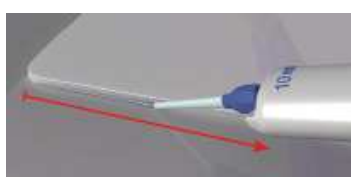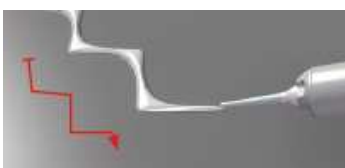

How to repair a crack in the sand filter?

PROPERTIES



underwater



elastic



easy to use



resistant
chemical
products



resistant
until 2000kg


- Clean and sand the area to be repaired (if it is possible).
- Read the instructions.
- Mix the two components with the additive with your fingers (30 seconds).
- Open the easy-opener and apply the product with the spatula in the area to be repaired.
- Spread the product leaving the desired thickness.
- Wait 5 minutes.
- Wait 24 hours to sand or paint.




TIPS

- The putty is prepared inside the container breaking the seals and mixing inside.
- Make a small tube to break the seals easily.
- If elasticity is desired, apply a thin layer, and a thick layer for extra strength. Thickness of 5mm is recommended.
- If is a complex repair, contacting a specialist is recommended.
- Working time: 3 minutes.
- Cure time: 22 minutes.
- The product yield is an area of 15x15cm.

Description on the package

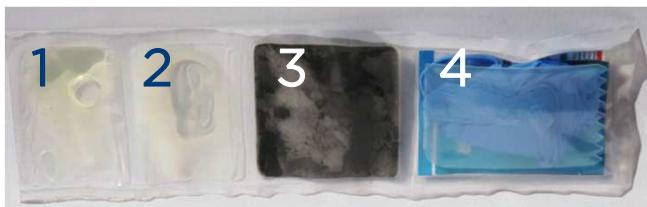

1. Component A
2. Component B
3. Additive
4. Accessories

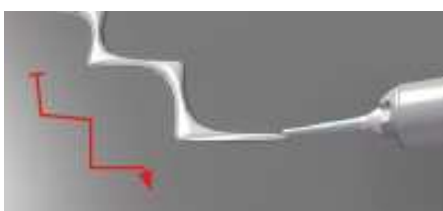

How to repair a crack in the tank?

PROPERTIES



underwater



elastic



easy to use



resistant
chemical
products



resistant
until 2000kg

- Sand the area to be repaired (especially if it has a coating).
- Read the instructions.
- Mix the two components with the additive with your fingers (30 seconds).
- Open the easy-opener and apply the product with the spatula in the area to be repaired.
- Spread the product leaving the desired thickness.
- Wait 5 minutes.
- Then prepare a fiberglass fabric and coat it with SUPER40.
- Place the fiber layers in different orientations.
- Wait 2 hours to start the tank.
- Wait 24 hours to sand or paint.



TIPS

- The putty is prepared inside the container breaking the seals and mixing inside.
- Make a small tube to break the seals easily.
- If elasticity is desired, apply a thin layer, and a thick layer for extra strength. A thickness of 5mm is recommended.
- If is a complex repair, contacting a specialist is recommended.
- If the repair is on a vertical wall, wait 1-2 minutes before placing the tile.
- Working time: 4 minutes.
- Cure time: 22 minutes.
- The product yield is an area of 15x15cm.
- Fibreglassing under water is easy, but using the spatula is convenient.
- To coat the fiberglass, use twice the resin than the coat weight per m²

Description on the package



1. Component A
2. Component B
3. Additive
4. Accessories

How to repair PVC liners?

PROPERTIES



underwater



fast
ready in 20'



easy to use



resistant
chemical
products



clean

- Clean the area to be repaired.
- Prepare el liner.
- Prepare SUPER40
 - Open the syringe and level the components.
 - Put the cannula and set it.
- Apply SUPER40.
 - It is recommended to apply the product in a zig-zag. The most important thing is to cover the perimeter of the patch well.
 - Spread the adhesive with a spatula.
- Place the liner patch.
- Wait 10 minutes.



TIPS

- Cut the liner patch with rounded edges, this way you will get a more lasting repair.
- Working time: 3-5 minutes.
- Cure time: 10 minutes.
- If the repair is on a vertical wall, apply SUPER40 on the liner and spread it.
- If you want a permanent repair, apply a very thin SUPER40 line on the perimeter of the patch. Then use the spatula to create a thin layer that prevents peeling.



How to repair leaks in a pipe?

PROPERTIES



underwater



elastic



easy to use



resistant
chemical
products



resistant
until 2000kg

- Clean and sand the area to be repaired (if it is possible).
- Read the instructions.
- Mix the two components with the additive with your fingers (30 seconds).
- Open the easy-opener and apply the product with the spatula in the area to be repaired.
- Spread the product leaving the desired thickness.
- Wait 5 minutes.
- Wait 24 hours to sand or paint.



TIPS

- The putty is prepared inside the container breaking the seals and mixing inside.
- Make a small tube to break the seals easily.
- If elasticity is desired, apply a thin layer, and a thick layer for extra strength. A thickness of 5mm is recommended.
- If is a complex repair, contacting a specialist is recommended.
- If the repair is on a vertical wall, wait 1-2 minutes before placing the tile.
- Working time: 5 minutes.
- Cure time: 22 minutes.
- The product yield is an area of 15x15cm.

Description on the package



1. Component A
2. Component B
3. Additive
4. Accessories



How to repair ladders?

PROPERTIES



underwater



fast
ready in 20'



easy to use



resistant
chemical
products





clean

- Clean the area to be repaired (if is possible).
- Prepare el SUPER40
 - Open the syringe and level the components.
 - Put the cannula and set it.
- Apply SUPER40.
 - Spread the adhesive with a spatula.
- Wait 10 minutes.



TIPS

- Working time: 3-5 minutes.
- Cure time: 10 minutes.
- If you want a permanent repair, apply a very thin SUPER40 line on the perimeter of the patch.

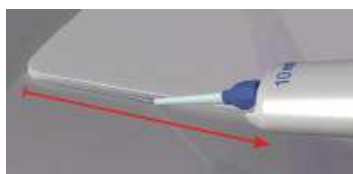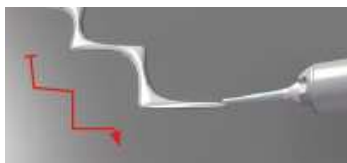

How to repair wooden decking?

PROPERTIES



underwater



fast
ready in 20



easy to use



resistant
chemical
products



clean

- Clean the area to be repaired (if is possible).
- Prepare el SUPER40
 - Open the syringe and level the components.
 - Put the cannula and set it.
- Apply SUPER40.
 - Spread the adhesive with a spatula.
- Wait 10 minutes.



TIPS

- Working time: 3-5 minutes.
- Cure time: 10 minutes.
- If the repair is on a vertical wall, apply SUPER 40 on a plastic and wait 5-7 minutes (once the product is mixed). Then the product is applied with a spatula.
- If you want a permanent repair, apply a very thin SUPER40 line on the perimeter of the patch.

