


ESPIO operation

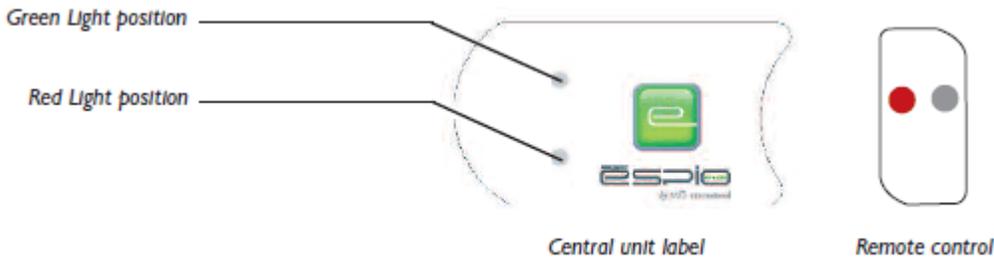

Pict. 1

Magnet:

<u>Requested Mode</u>	<u>Operation</u>	<u>Indication</u>
Armed	place the magnet on the GREEN indicator light, until a validation sound (one loud beep) + flashing of the GREEN indicator light	One (1) loud beep + flashing of the GREEN indicator light
Disarmed	place the magnet on the RED indicator light, until a validation sound (five loud beeps) + flashing of the RED indicator light	Five (5) loud beeps + flashing of the RED indicator light

Remote Control:

<u>Requested Mode</u>	<u>Operation</u>	<u>Indication</u>
Armed	press the GREY button, until One (1) loud beep	One (1) loud beep + flashing of the GREEN indicator light
Disarmed	Press and hold the RED button, then press the GREY button, until five (5) loud beeps	Five (5) loud beeps + flashing of the RED indicator light

Complete STOP:

<u>step</u>	<u>Operation</u>	<u>Indication</u>
1)	Disarm the Espio alarm system	
2)	Place and hold the Magnet on the green indicator light, Continue to hold the magnet on the green.	One (1) loud beep
3)	(Continue to hold the Magnet on the green indicator light), Press and hold the GREY button (remote-control), until One (1) loud beep	One (1) loud beep
4)	(Continue to hold the Magnet on the green indicator light), Release the GREY button	fast flashing of the RED indicator light
5)	(Continue to hold the Magnet on the green indicator light), Press and hold the GREY button, until the RED indicator remains fully-ON + Several short beep	Several short beeps + the RED indicator light remains fully-ON
6)	Now, you can remove the Magnet and the Remote-control	All GREEN + RED Indicator lights are OFF
	To reactivate the Espio - press the grey button (remote-control)	Five (5) loud beeps + flashing of the RED indicator light

Notes:

- 1) Check to have best quality and charged batteries (Espio unit + remote-control).
- 2) The Remote-Control transmits to the Espio from 5 meters away at least, (tested at visual eye-contact with the Espio). However, the pool-owner must verify visually the Indicator-lights indications, on the Espio unit.